 



KIM-CPU




KIM-RAM



 
KIM-HMI




RIOT

 


KIM-Audio/TTY

 

KIM-Connector

 

KIM-Supply

 

Sheet: /
File: kim.kicad_sch


Title: KIM-1 Replika

Size: A4 Date: 2022-01-10

Rev: 1.0

KiCad E.D.A. kicad 6.0.9-8da3e8f707-117-ubuntu20.04.1


Id: 1/8

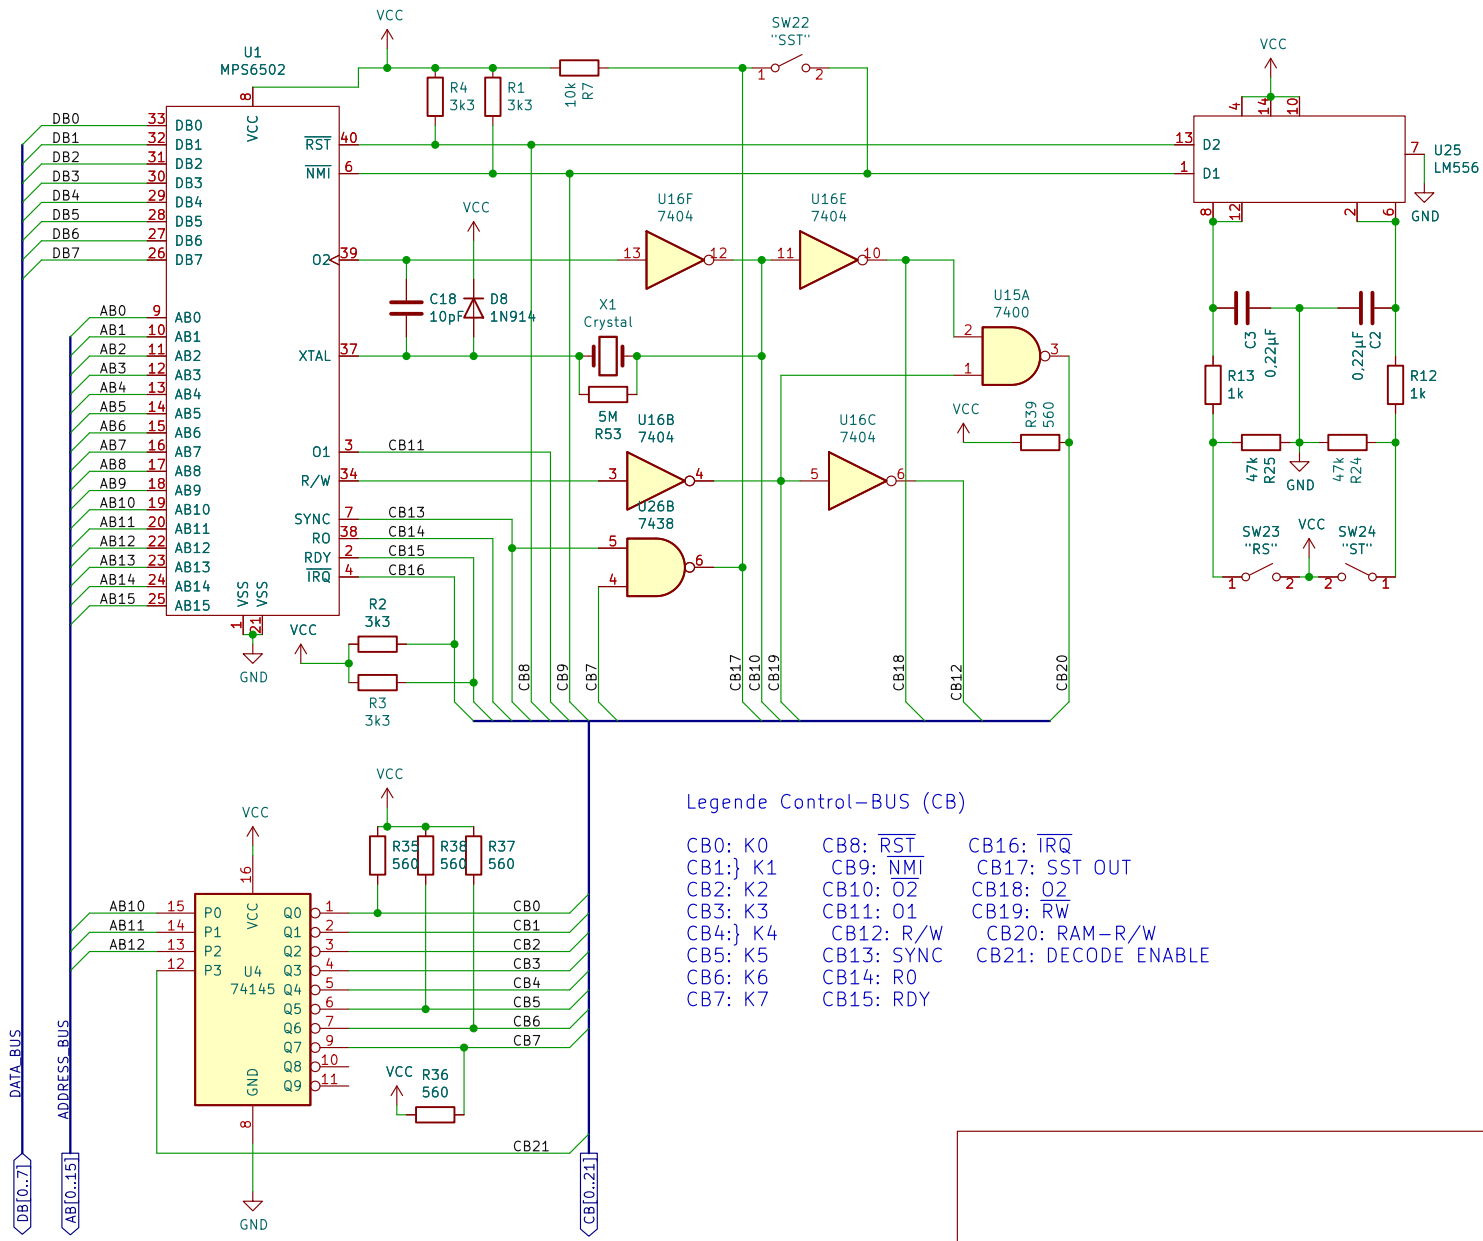


Legende Control-BUS (CB)

- CB0: K0 CB8: \overline{RST} CB16: \overline{IRQ}
- CB1: K1 CB9: NMI CB17: SST OUT
- CB2: K2 CB10: O2 CB18: O2
- CB3: K3 CB11: O1 CB19: \overline{OZ}
- CB4: K4 CB12: R/W CB20: RAM-R/W
- CB5: K5 CB13: SYNC CB21: DECODE ENABLE
- CB6: K6 CB14: R0
- CB7: K7 CB15: RDY

Sheet: /KIM-CPU/	
File: KIM_CPU.kicad_sch	
Title: KIM-1 CPU	
Size: A4	Date: 2022-01-27
KiCad E.D.A. kicad 6.0.9-8da3e8f707-117-ubuntu20.04.1	Rev: 1.0
	Id: 2/8

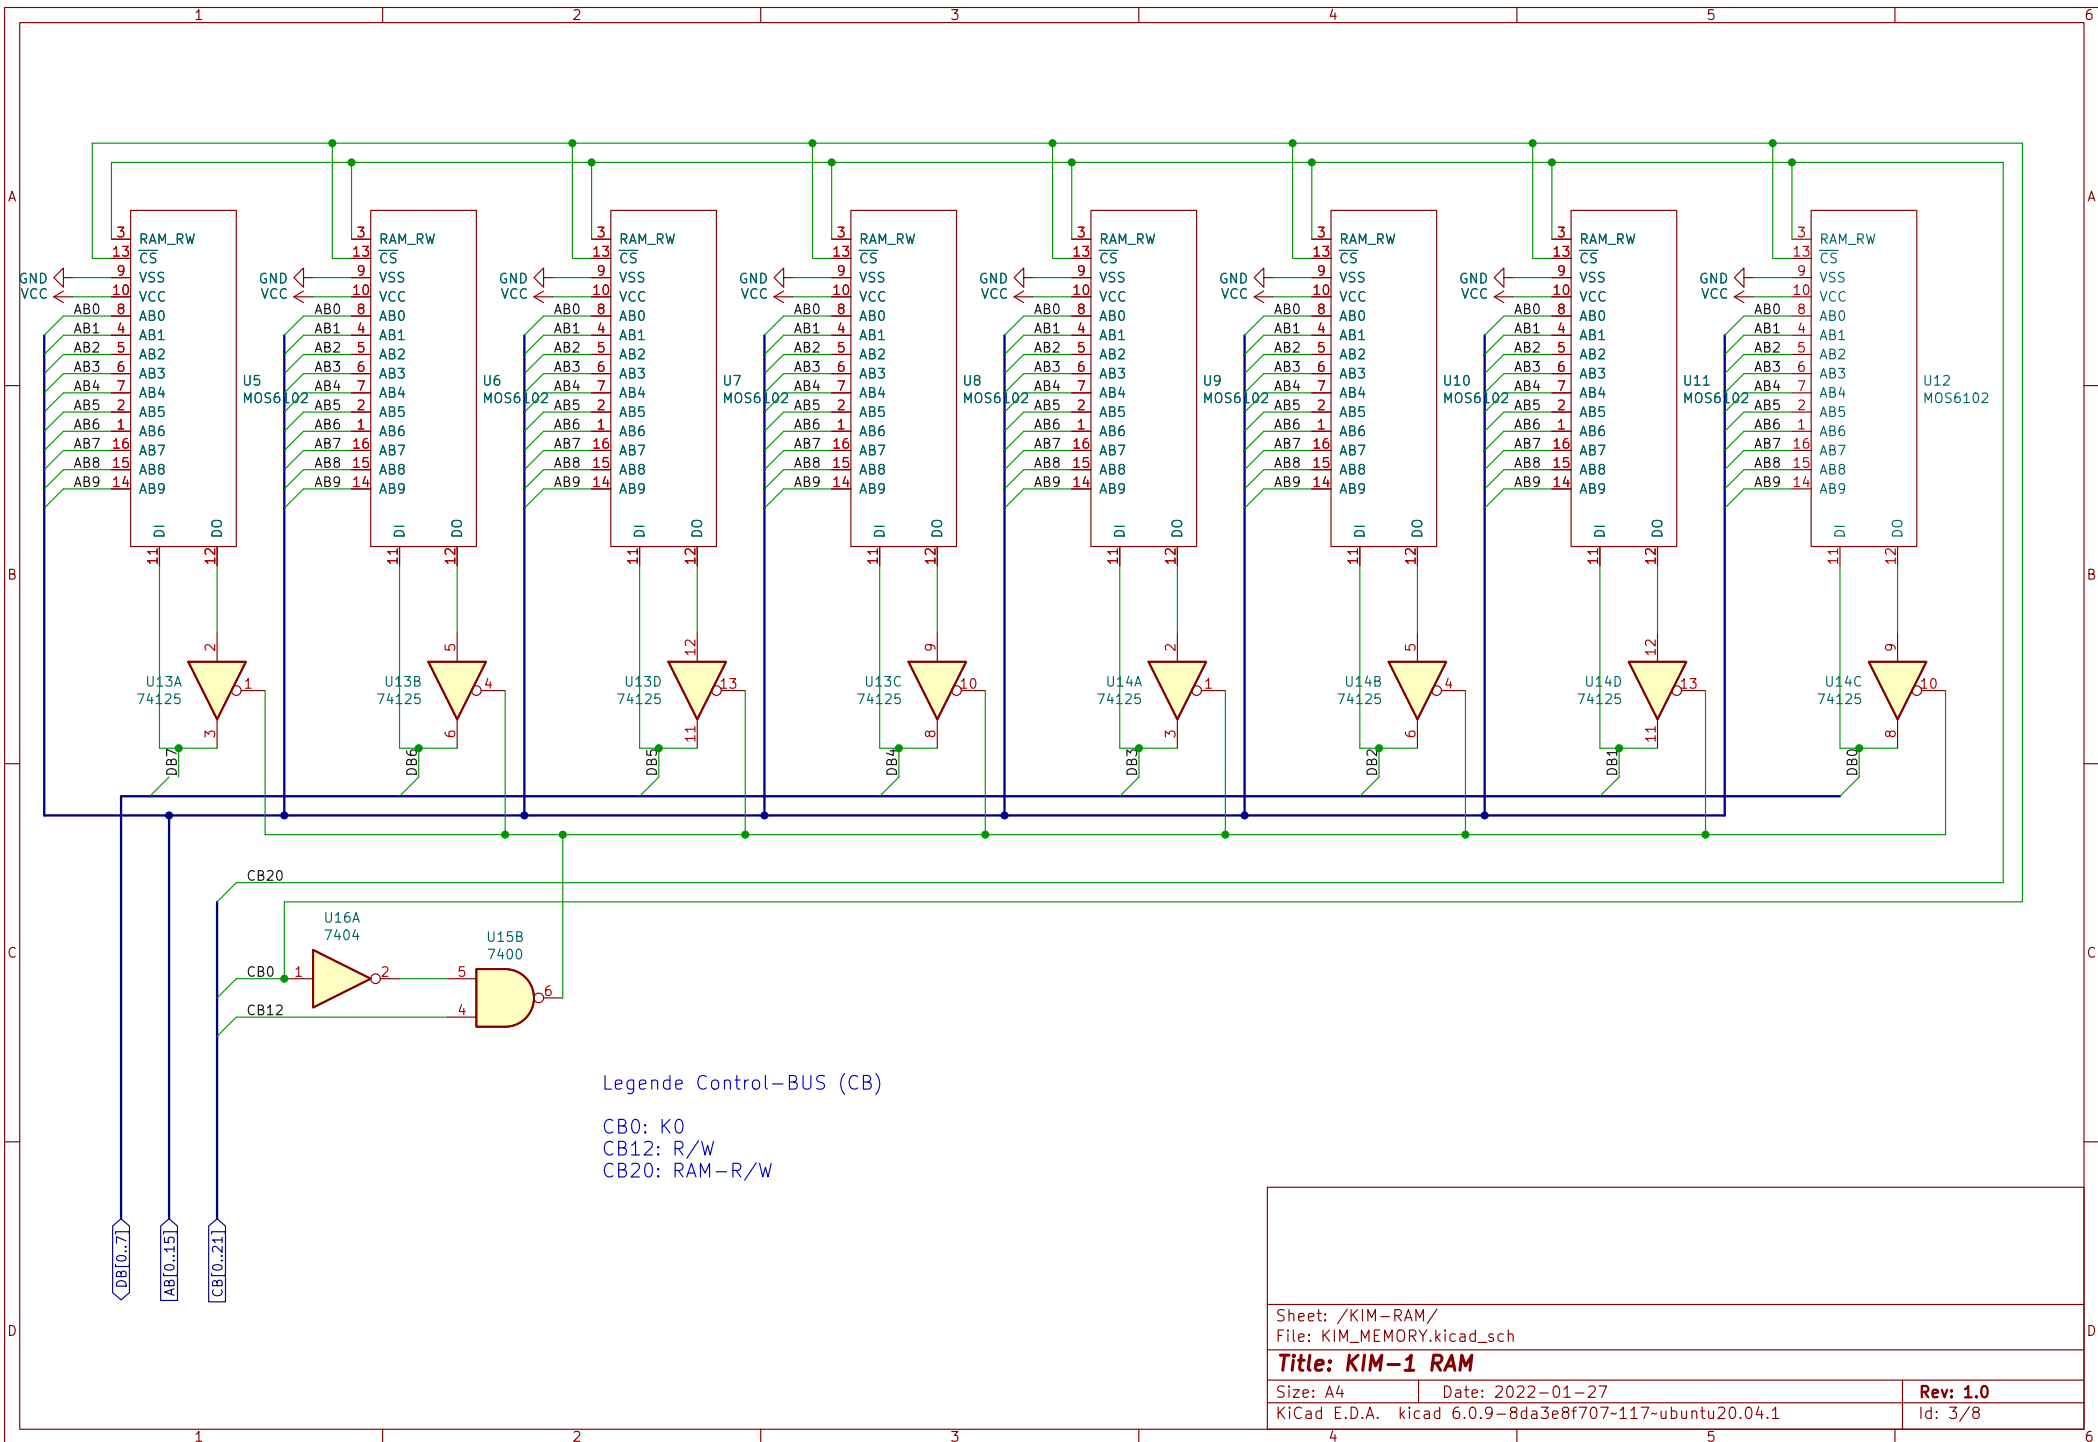

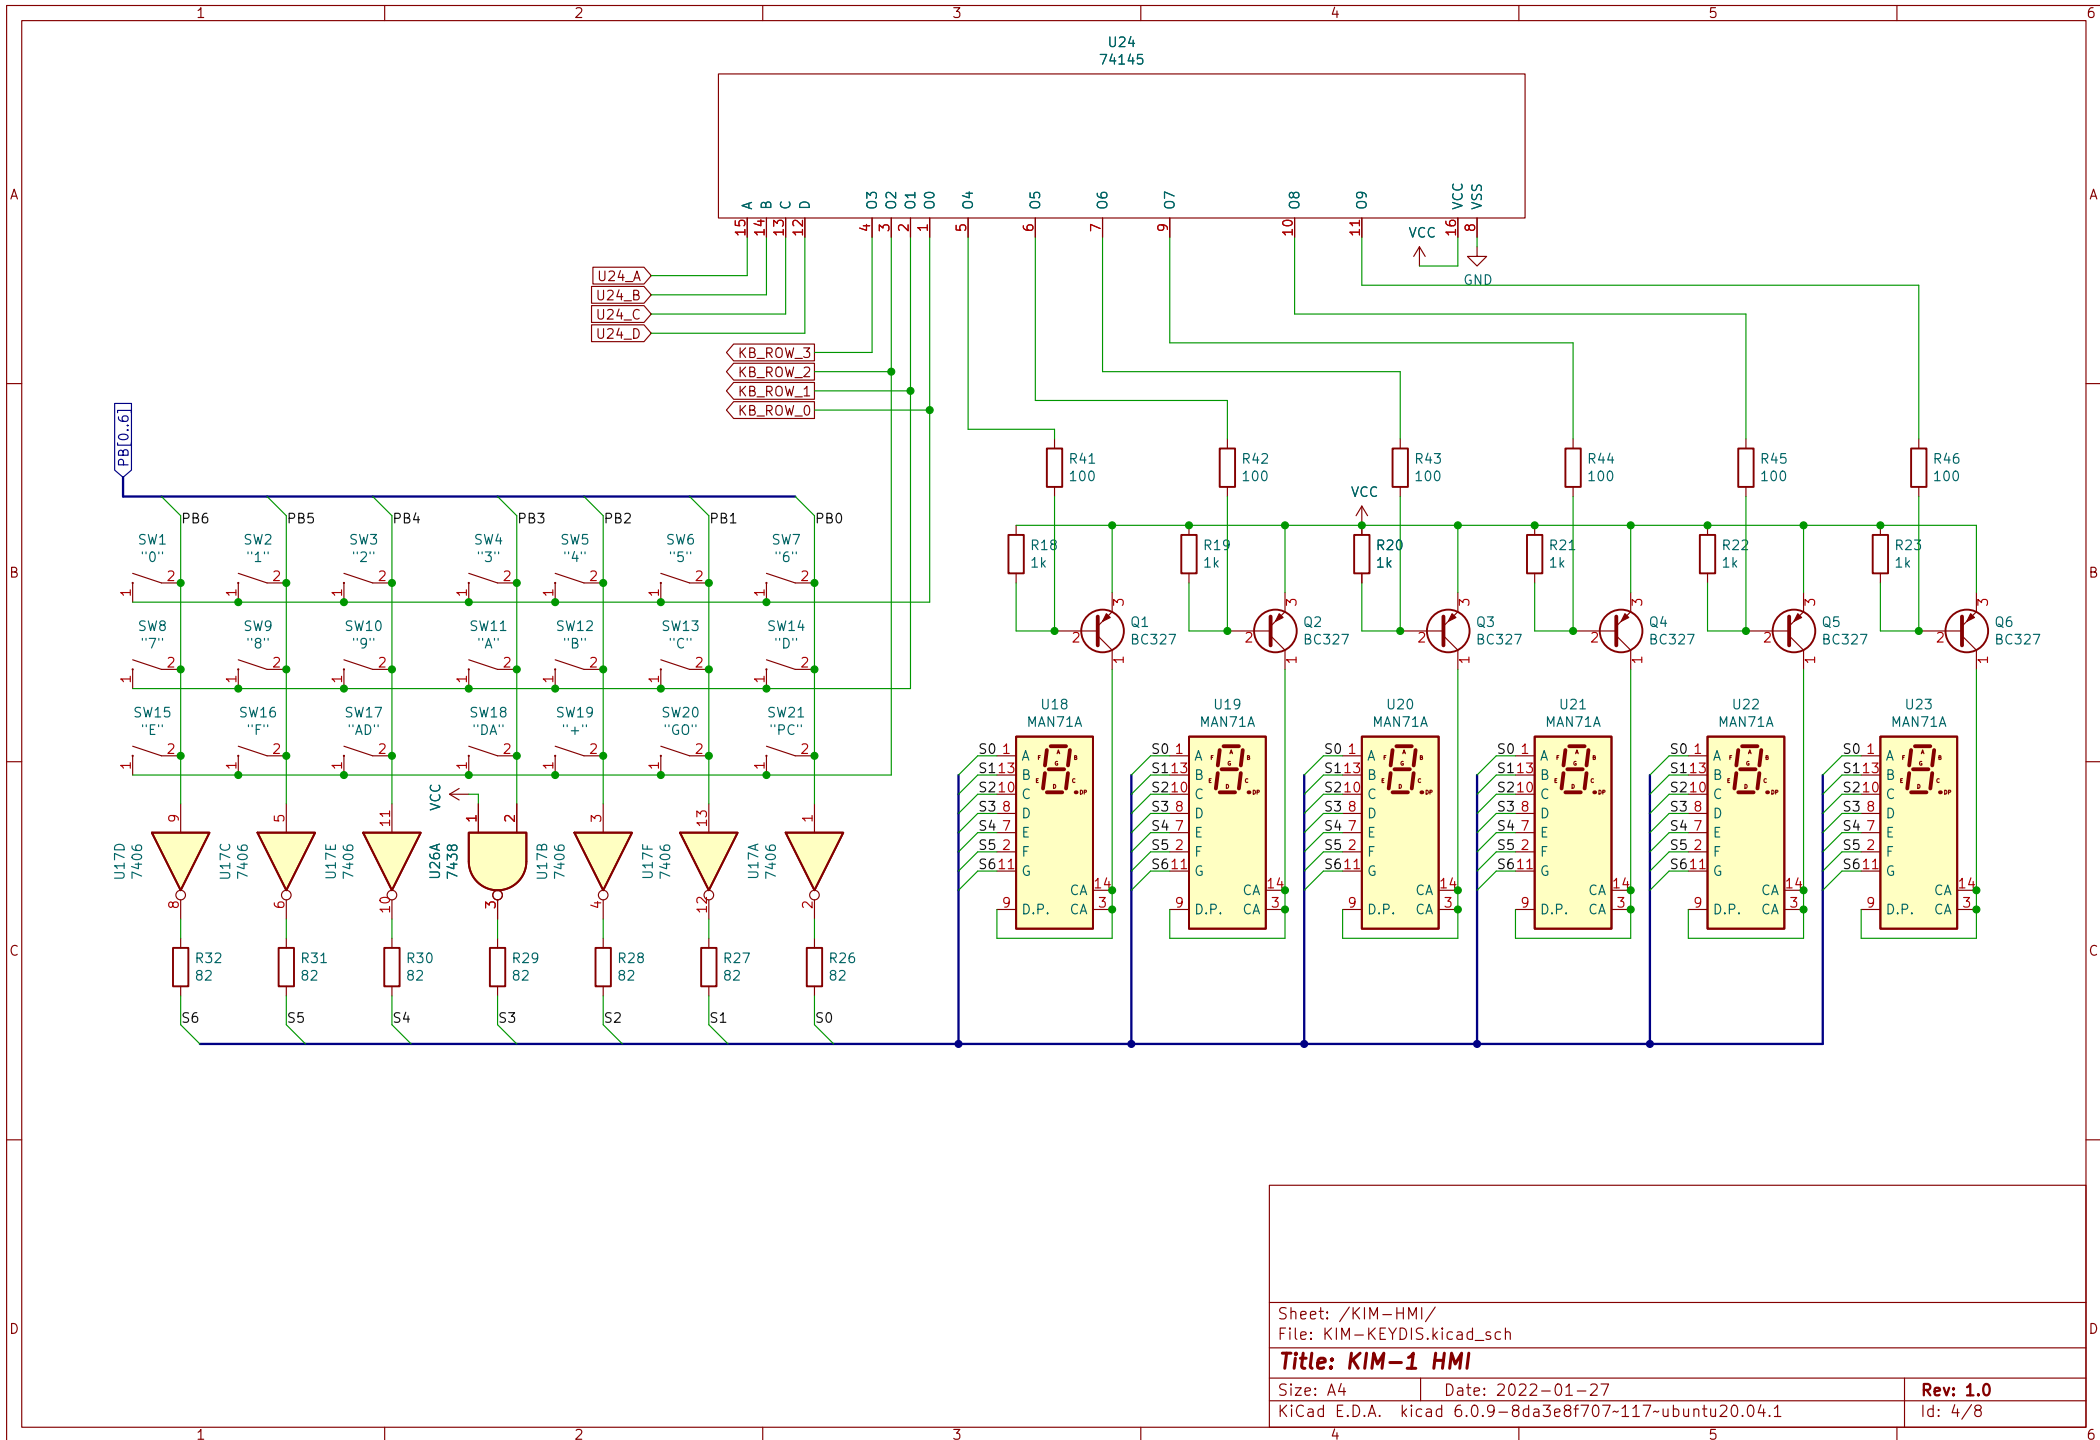



Sheet: /KIM-HMI/
File: KIM-KEYDIS.kicad_sch

Title: KIM-1 HMI


Size: A4 Date: 2022-01-27
KiCad E.D.A. kicad 6.0.9-8da3e8f707-117-ubuntu20.04.1

Rev: 1.0
Id: 4/8

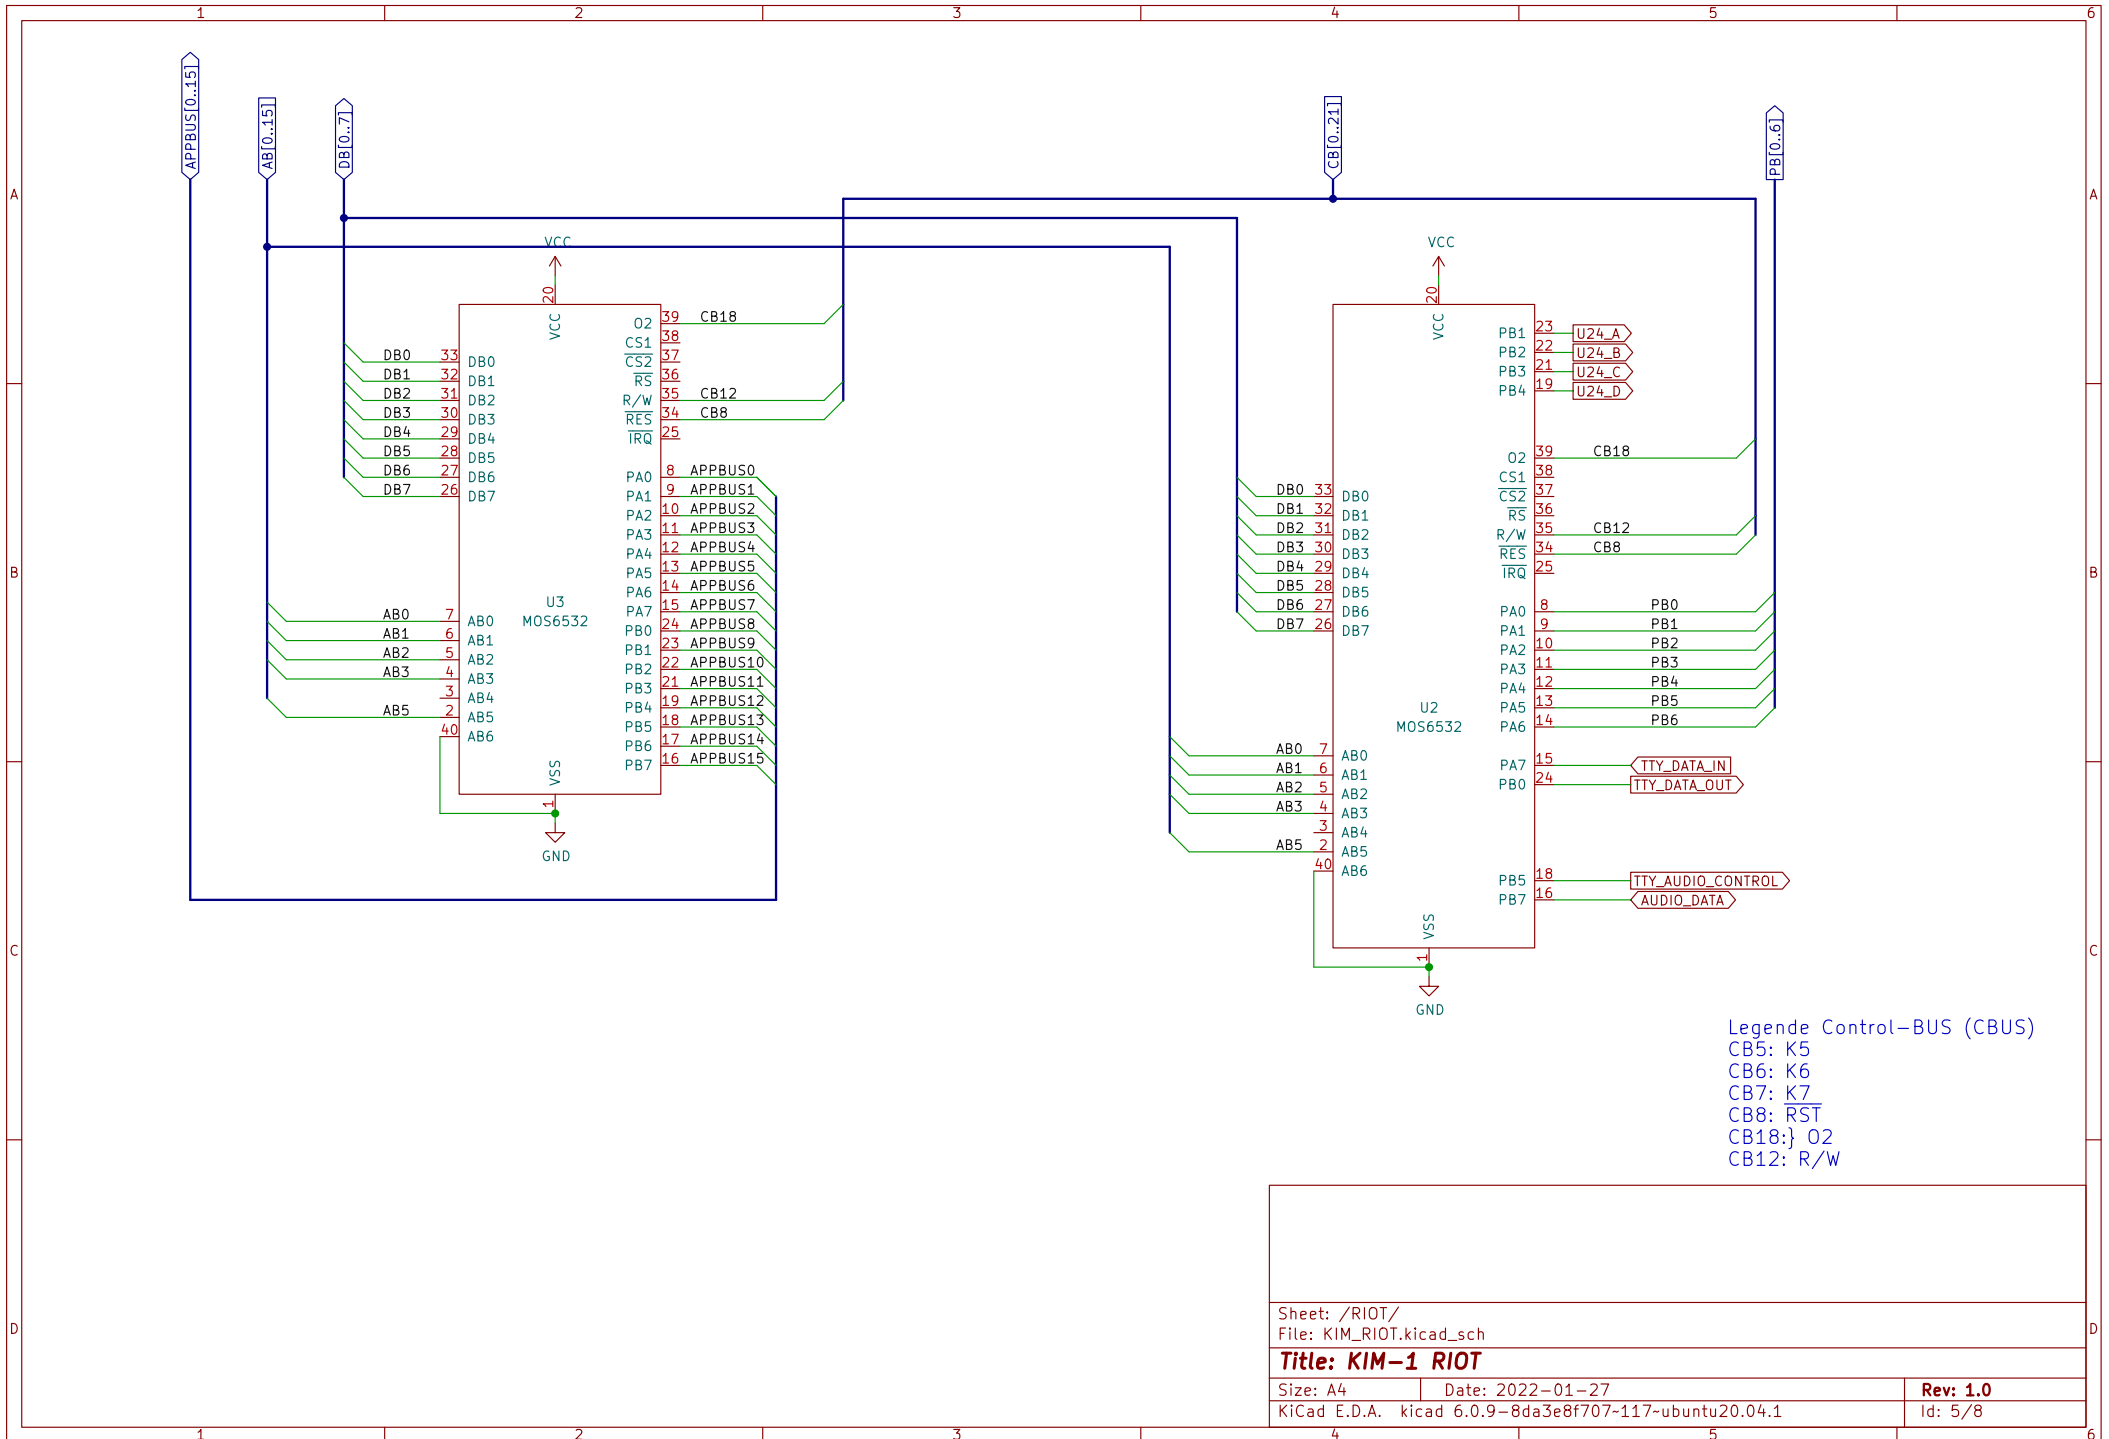

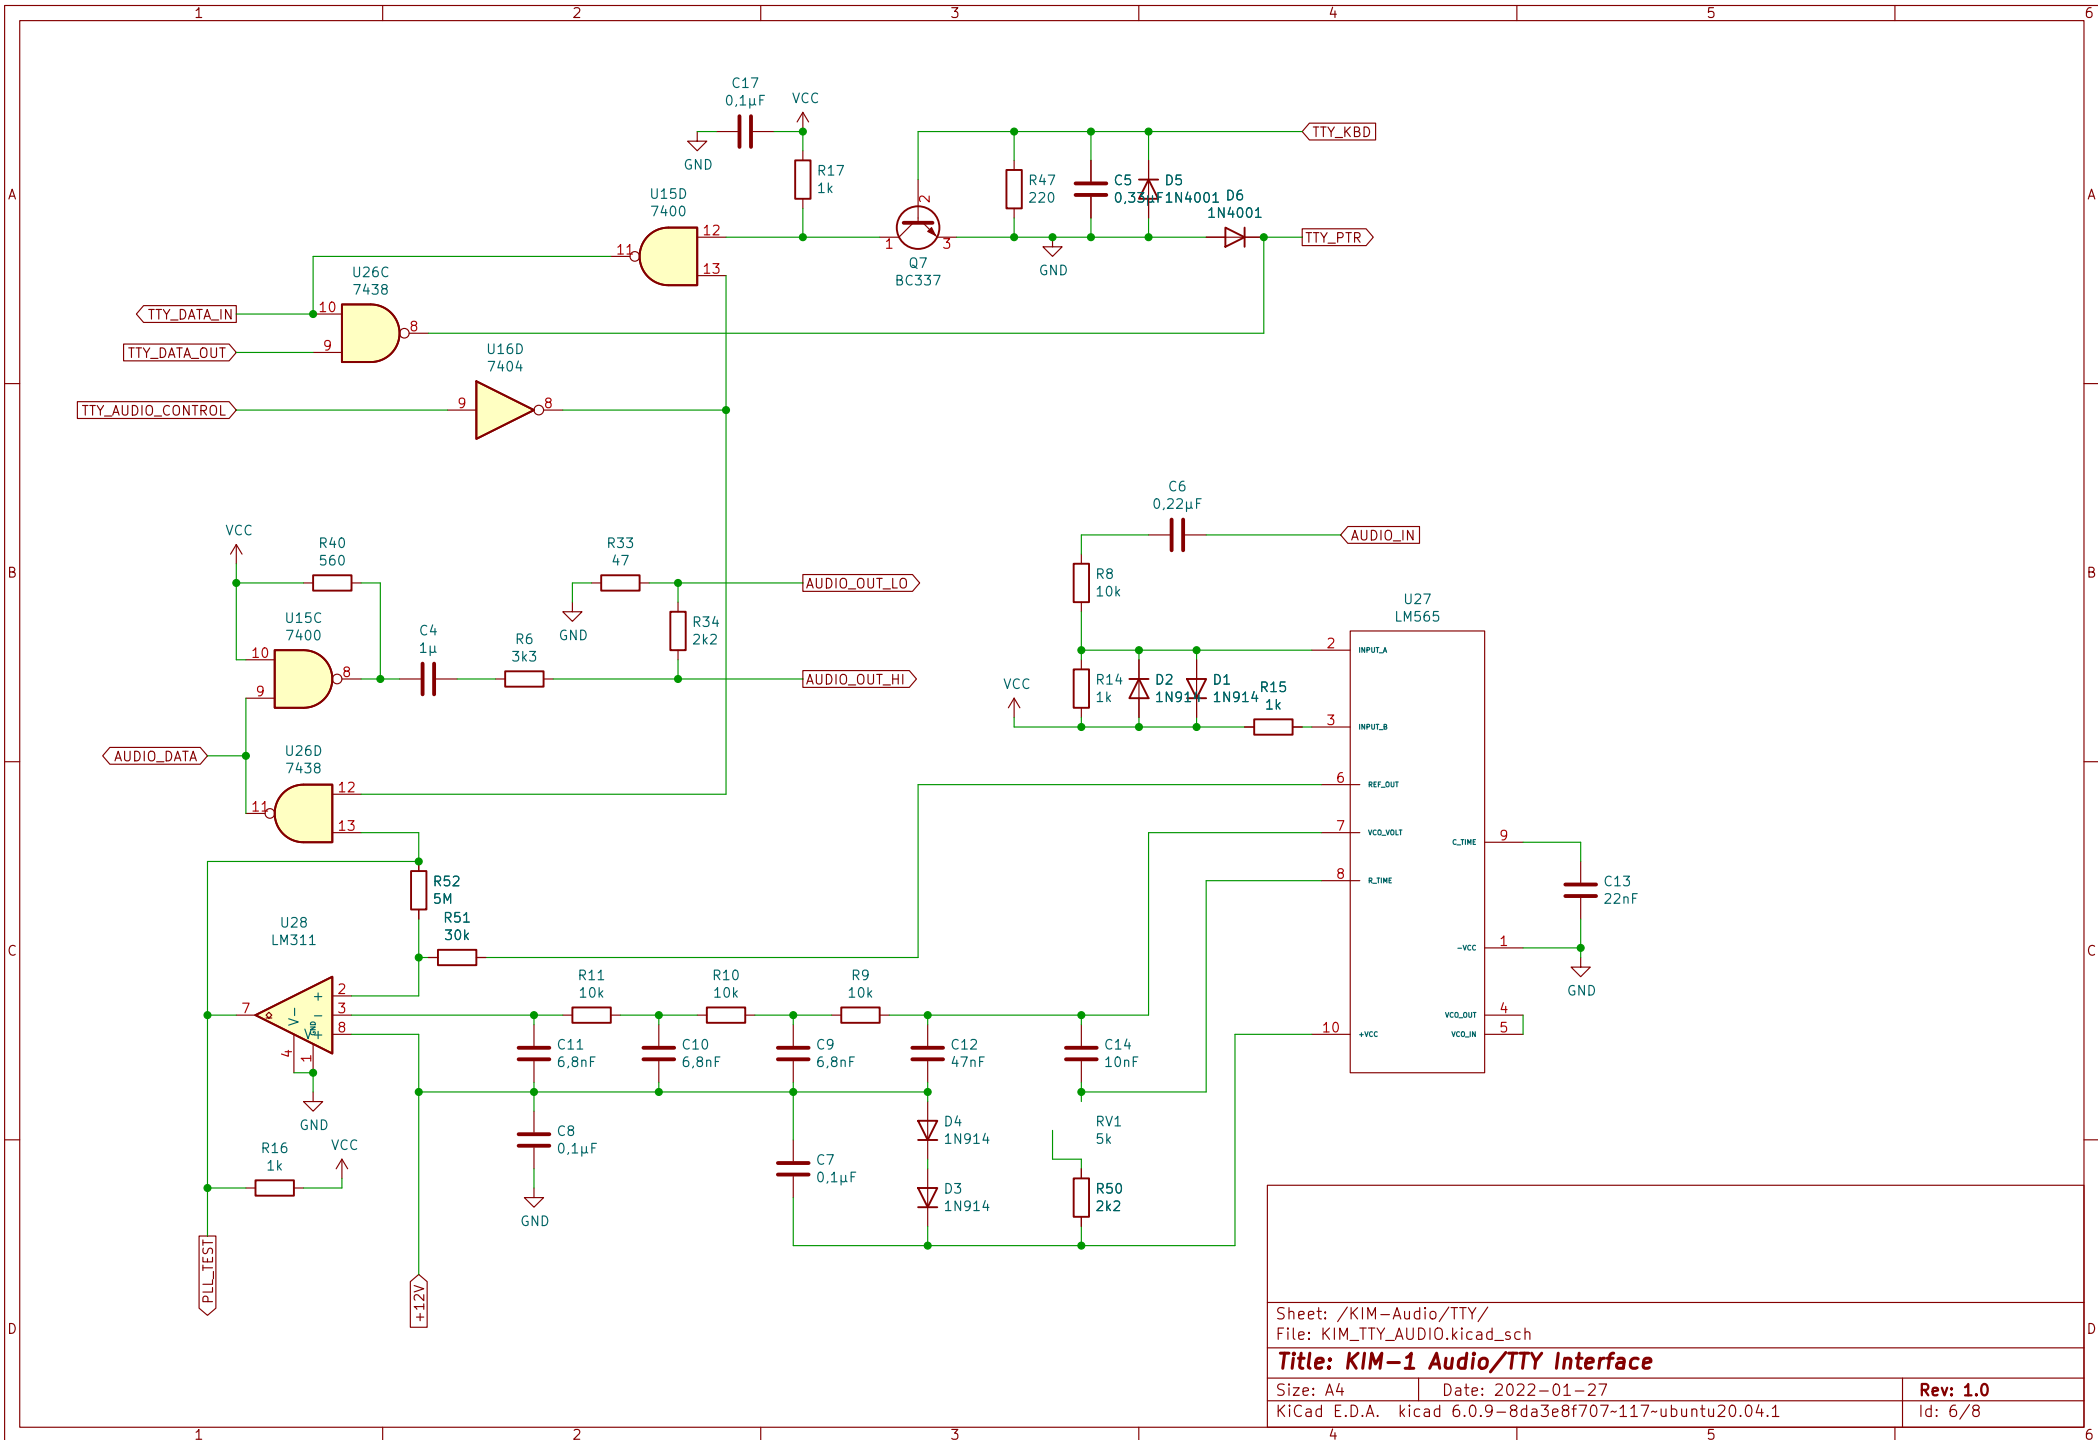


Sheet: /KIM-Audio/TTY/
 File: KIM_TTY_AUDIO.kicad_sch
Title: KIM-1 Audio/TTY Interface
 Size: A4 Date: 2022-01-27
 KiCad E.D.A. kicad 6.0.9-8da3e8f707-117-ubuntu20.04.1 Rev: 1.0
 Id: 6/8

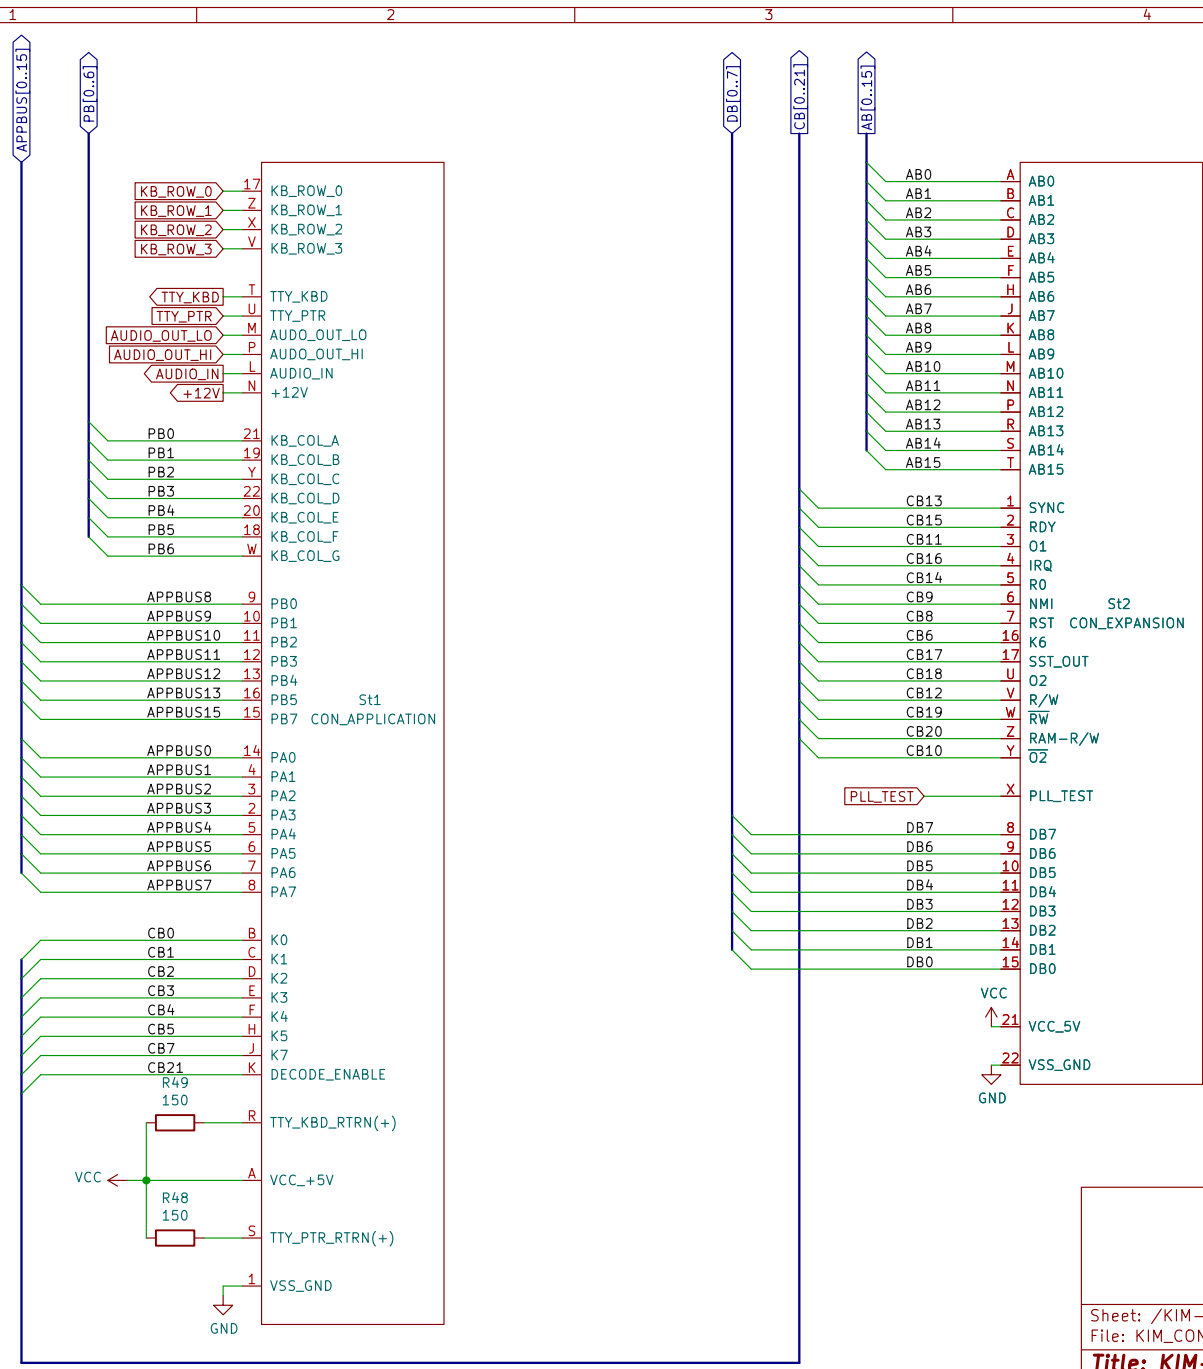

Legende Control-BUS (CB)

CB0: K0	CB8: \overline{RST}	CB16: \overline{IRQ}
CB1:} K1	CB9: \overline{NMI}	CB17: SST OUT
CB2: K2	CB10: $\overline{O2}$	CB18: $\overline{O2}$
CB3: K3	CB11: 01	CB19: \overline{RW}
CB4:} K4	CB12: R/W	CB20: RAM-R/W
CB5: K5	CB13: SYNC	CB21: DECODE ENABLE
CB6: K6	CB14: R0	
CB7: K7	CB15: RDY	

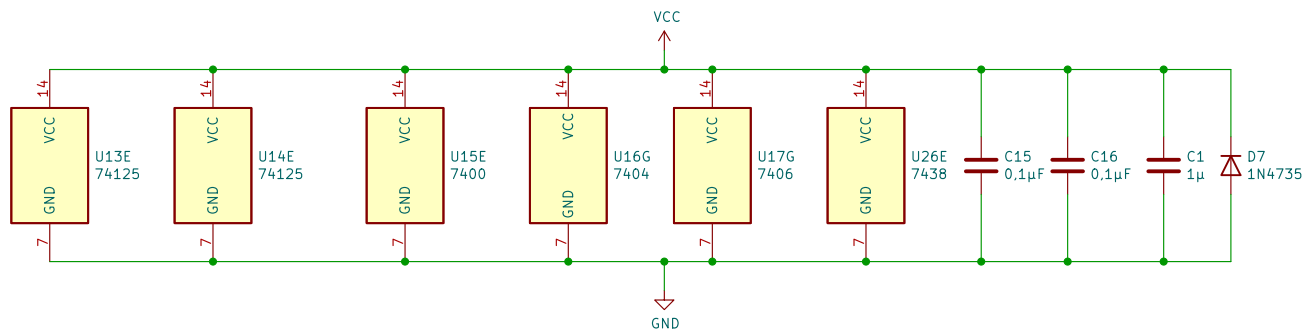

Sheet: /KIM-Supply/
 File: KIM-SUPPLY.kicad_sch

Title: Kim-1 Supply

Size: A4 Date: 2022-01-27
 KiCad E.D.A. kicad 6.0.9-8da3e8f707-117-ubuntu20.04.1

Rev: 1.0
 Id: 8/8